


At Cambridge NanoTech, we simplify the science of atomic layer deposition (ALD) and apply it to solve complex thin film challenges.

As the leading ALD solution provider to researchers and manufacturers worldwide, we are redefining the field with versatile turnkey systems and expert services. Our ALD solutions enable unsurpassed coatings on virtually any surface or substrate to meet the needs of today's manufacturing environments including high throughput, large-surface area, and batch.

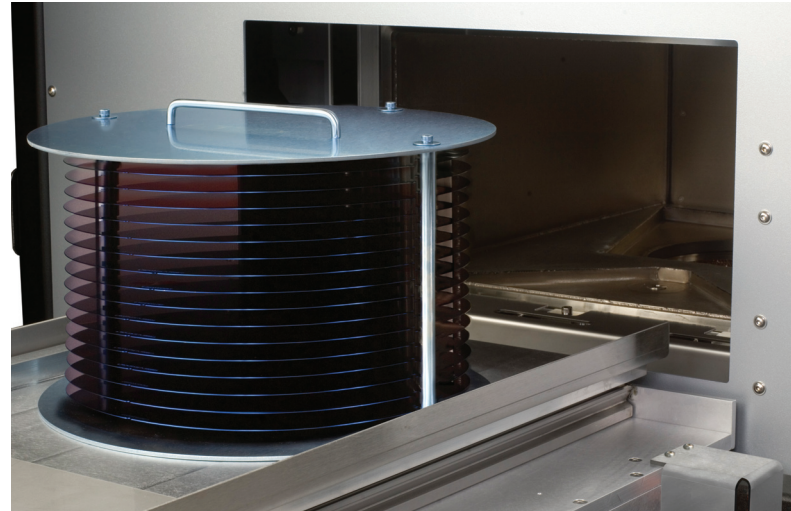

### Precision

The Phoenix uses our proprietary precursor delivery system to deposit films on surfaces. This unsurpassed precision delivers an accurate, uniform coating thickness every time, for superior film quality and repeatable results on all of your production runs.

- **Precise process control.** Exact control of process parameters including temperature, flow, and pressure. With support of up to six individual precursor lines, the Phoenix delivers solid, liquid or gaseous process chemistries depending on your specific thin film requirements.
- **Defect-free coating process.** Our low-temperature, low-stress coating processes, based on self-limiting monolayer growth, achieve a uniform, pin-hole free coating with superior adhesion on even the most sensitive substrates.
- **Control software.** Precise thin films come from precise control. Our proven Graphical User Interface (GUI), with real-time control of system parameters, is powerful, yet simple to use. The Phoenix control software is automation-ready and delivers state-of-the-art connectivity to any manufacturing system.



Phoenix System

### Performance

Engineered for high throughput and maximum uptime, the Phoenix ensures repeatable, highly accurate film deposition, from batch to batch, for your manufacturing operations.

- **High productivity batch mode.** Proprietary fast-pulse ALD valves deliver precursor input for even distribution and flow through the reactor, for high quality film results without compromising throughput. With its large process chamber, the Phoenix can coat up to five GEN 2.5 FPD substrates, multiple wafer cassettes, and large 3D objects.
- **Rapid thermal recovery time.** The Phoenix takes only minutes to return to operational chamber temperature, getting you up and running quickly for processing your next batch.
- **4000 hours Mean Time between Failures (MTBF).** High MTBF means you spend more time coating high quality thin films and less time maintaining your ALD system.

### The Practical Choice

Designed by experts who have consistently engineered innovative ways to simplify the ALD process and yield extraordinary thin film results, the Phoenix system is a practical choice for high-throughput batch production environments.

- **Low cost of ownership (COO).** Low startup and operational costs combined with a compact footprint and high-throughput ensures that the Phoenix delivers lowest possible COO.
- **Easy maintenance.** The Phoenix is designed for fast and easy maintenance of wetted surfaces, including reactor liners and integrated vapor trap, that are chem-cleanable and easily removed without tools.
- **Compact footprint.** With a compact footprint (1090 x 1370 mm), the Phoenix conserves valuable clean room space.
- **A complete solution.** Each Phoenix system includes qualified recipes and prepackaged chemistries that have been proven on


System Specifications	
Substrate size	Up to 370 x 470 mm (GEN 2.5) 100 wafers - 100 mm (cassette) 100 wafers - 150 mm (cassette) 100 wafers - 200 mm (cassette) 17 wafers - 300 mm (cassette)
Dimensions (w x d x h)	1090 x 1370 x 2300 mm
Cabinet	Stainless steel vented cabinet with smoke detection
Power	208 VAC 3 Phase, 8500 W (excluding pump)
Control	LabVIEW™, USB, Windows™ PC
Substrate Temperature	85 °C - 285 °C
Deposition Uniformity (Al <sub>2</sub> O <sub>3</sub> )	<2% (1σ)
Vacuum Pump	>50 CFM dry pump
Compatibility	Cleanroom class 100 compatible
Precursor Specifications	
Precursor Delivery System	2 lines standard, up to 6 lines available. Each line accommodates solid, liquid and gas precursors and is independently heated up to 200 °C (higher temperature optionally available.) Metal VCR seals.
Valves	Industry standard high speed ALD valves with 10 msec response time
Precursor Cylinders	Individually heated 200 ml stainless steel cylinders, optional larger cylinders available
Carrier/Venting Gas	N <sub>2</sub> or Ar mass flow controlled, 500 SCCM

multiple substrates. All Cambridge NanoTech systems are supported by a team of world leading ALD scientists and technologists.

- **Built for safety.** The Phoenix has a fully-vented steel cabinet, smoke alarm, accidental precursor drip pan, three EMOs, and many other built-in safety features.

### ALD Shield™

Our Phoenix integrated ALD Shield™ prevents build-up of deposits on the plumbing and the pump by capturing excessive process gases before they reach the pumping system. This saves money in maintenance costs and prevents excess gases from being exhausted to the environment. The ALD Shield's high conductance, hot foil design causes process gases to deposit until depleted. The vapor shield is easily removable for periodic cleaning.

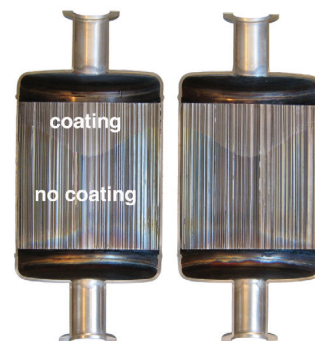


### ALD Films and Recipes

Cambridge NanoTech scientists have developed standard materials and recipes that have been proven on multiple substrates. These materials are prepackaged and available from our partners, Strem Chemicals and Sigma-Aldrich.

### Glovebox Integration

The Phoenix is readily integrated with MBraun™ gloveboxes for handling thin film samples in an advanced inert atmosphere system that is free of oxygen and moisture.

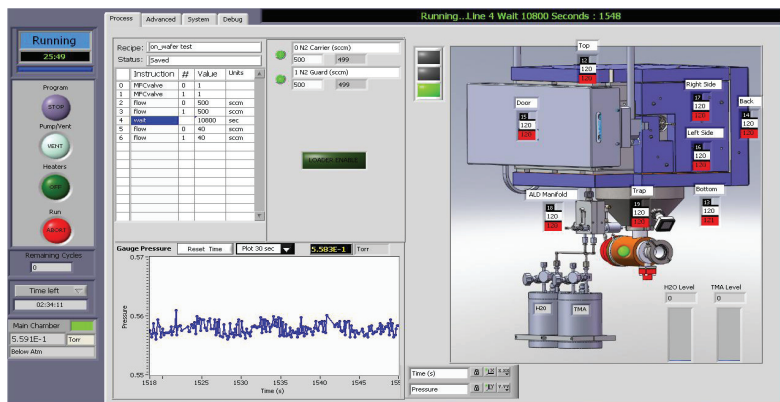

Phoenix Software

Cambridge  
NanoTech  
Simply ALD

68 Rogers Street  
Cambridge, MA 02142

T: 617-674-8800

www.cambridgenanotech.com

Cambridge NanoTech, Phoenix, and ALD Shield are trademarks of Cambridge NanoTech, Inc. LabVIEW is a trademark of National Instruments Corporation. Strem Chemicals, Sigma-Aldrich, and MBraun are trademarks of their respective holders. Phoenix is the subject of patents pending.